


Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

ITEM 69460

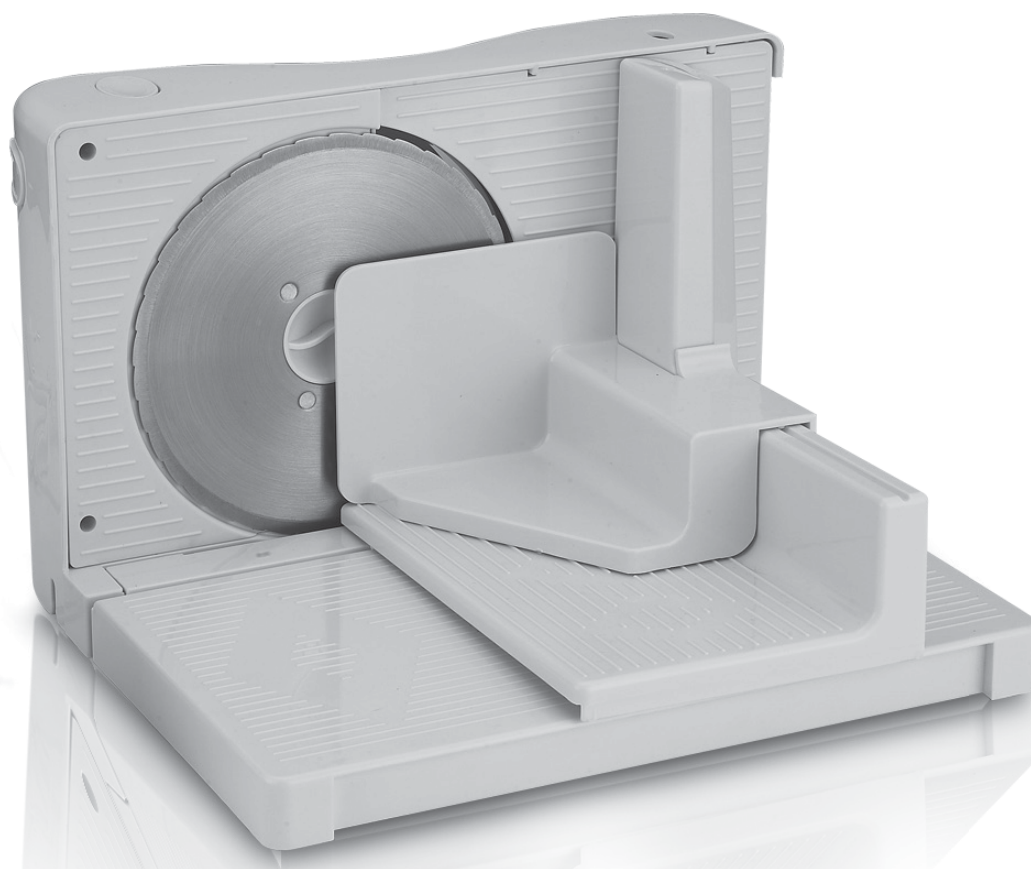

ELECTRIC FOOD SLICER

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: tech@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright© 2012 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.






⚠ WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Table of Contents

Safety	2	Maintenance	6
Specifications	4	Parts List and Diagram	6
Assembly	4	Warranty	8
Operation.....	5		

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	Addresses practices not related to personal injury.

IMPORTANT SAFETY INFORMATION

WARNING


READ AND UNDERSTAND ALL INSTRUCTIONS.

When using electrical appliances, safety precautions should always be followed including the following:

Work Area Safety

1. Do not use outdoors.
2. Close supervision is necessary when any appliance is used by or near children.
3. Do not let cord hang over edge of table or counter, or touch hot surfaces.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Extreme caution must be used when moving an appliance.
6. Keep the work area well lit. Make sure there is adequate surrounding workspace. Keep the work area free of obstructions and other debris.

Electrical Safety

1.  To protect against electrical shock do not immerse cord, plugs, or the main unit in water or other liquid. Only the non-electrical parts of the unit may be immersed for cleaning.
Thoroughly clean and dry these parts prior to first use and before every subsequent use.
2. Unplug from outlet when not in use and before maintenance or cleaning.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

Electrical Safety (cont.)

4. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not change the plug in any way.
5. Do not use this product in a damp or wet location.
6. Do not clean with metal scouring pads. Metal pieces can break off the pads and touch electrical parts involving risk of shock.

Power Cord Safety

1. A short power supply cord is provided to reduce risks resulting from becoming entangled in, or tripping over, a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a long extension cord is used,
 - a. the marked electrical rating of the (detachable power supply cord or) extension cord should be at least as great as the electrical rating of the appliance, and
 - b. the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Blade Safety

1. **Do not push food by hand, use pusher at all times.**
2. **Wear heavy-duty work gloves when handling blade.**
3. Do not slice bone-in meats.

General Safety

1. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
2. Do not use appliance for other than intended use.
3. Maintain labels and nameplates on the appliance. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
4. Do not store anything other than the manufacturer's recommended accessories in this unit when not in use.
5. This product is not a toy. Keep it out of reach of children.
6. Before every use, thoroughly clean the appliance (see "Cleaning" section for instructions) and wash your hands.
7. **WARNING:** Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (California Health & Safety Code § 25249.5, *et seq.*)
8. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
9. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



SAVE THESE INSTRUCTIONS.

Specifications

Electrical Rating	120V~ / 60Hz
Blade Diameter	6-1/2"
Slice Thickness	1/16" to 1/2"

Assembly



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

!WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION AND ELECTRIC SHOCK: Turn the Power Switch of the appliance to its "OFF" position and unplug the appliance from its electrical outlet before assembling or making any adjustments to the appliance.

TO REDUCE RISK OF FOOD BOURNE ILLNESS:

Before assembling the Food Slicer, thoroughly wipe off all parts with a clean rag using warm soapy water and a mild chlorine bleach solution, and clean the Food Pusher, Blade, and Food Tray in a dishwasher. Clean the Food Slicer after every use. Failure to follow all cleaning instructions and warnings may result in serious illness due to food poisoning.

Note: For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram near the end of this manual.

1. Unfold the Platform from the Main Body.
2. Slide the Food Pusher onto the Food Tray.
The arm of the Food Pusher fits over the fence on the Food Tray.
3. The Food Tray with the attached Food Pusher slides into the slot on the Platform.
4. After assembling the unit (see directions below), test the Food Slicer by running several slices of day-old bread through the Food Slicer to ensure that all parts are working properly.

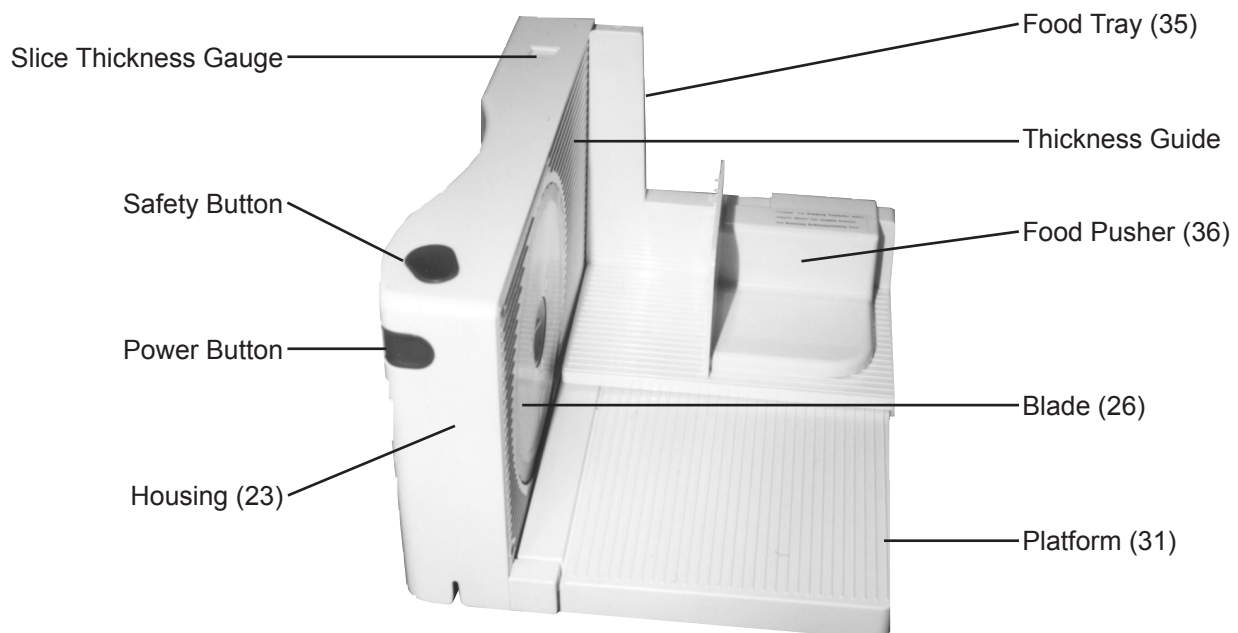


Figure A: Features

Note: Thickness Knob shown on Figure B instead.

Operating Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Turn the Power Switch of the appliance to its “OFF” position and unplug the appliance from its electrical outlet before assembling or making any adjustments to the appliance.

TO PREVENT SERIOUS INJURY:

DO NOT OPERATE WITH ANY GUARD DISABLED, DAMAGED, OR REMOVED.

1. Locate the Food Slicer on a non-slip counter surface. The operator stands behind the Food Tray.



Figure B: Thickness Knob

2. Set the Thickness Knob for the desired slice thickness. Turn the Thickness Knob clockwise for thicker slices and counterclockwise for thinner slices.
3. Slide the Food Tray out away from the Blade and towards the operator. Place the food to be sliced on the Food Tray. Position the Food Pusher so that it can hold the food to be sliced as the Food Tray is moved towards the Blade.

CAUTION! KEEP FINGERS AWAY FROM THE BLADE AT ALL TIMES.

4. To start the Food Slicer, push both the Power Button and the Safety Button at the same time. If either is not pushed down, the Food Slicer will not operate. Use your left hand to operate the Power Button and the Safety Button.
5. Place your right hand on the outer edge (farthest from the Blade) of the Food Pusher with your thumb protected behind thumb guard.
6. Slide the Food Tray back and forth, allowing the Food Pusher to push the food towards the Blade.
7. To turn off the Food Slicer, release the Power Button and the Safety Button.

For Best Results:

- Chill foods thoroughly before slicing.
- Fish and thin steaks will slice better if partially frozen.
- Remove strings before slicing roasts.

Blade Removal

CAUTION! WHEN REMOVING AND REPLACING BLADE, BE ALERT TO SHARP BLADE TEETH!

1. Turn off and unplug the Food Slicer.
2. Turn the Blade (26) counterclockwise to unlock it.
3. Pull out the Blade.

CAUTION! BEFORE FIRST USE AND AFTER EVERY USE, CLEAN THE BLADE.

4. To replace the Blade (26), line up the tabs on the Blade (26) with the slots.
5. Once the Blade is seated, turn the Blade clockwise to lock it in position.

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

!WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Turn the Power Switch of the appliance to its “OFF” position and unplug the appliance from its electrical outlet before performing any inspection, maintenance, or cleaning procedures.

TO PREVENT SERIOUS INJURY FROM APPLIANCE FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning and Maintenance

- BEFORE EACH USE**, inspect the general condition of the appliance. Check for:
 - loose hardware,
 - misalignment or binding of moving parts,
 - cracked or broken parts,
 - damaged electrical wiring, and
 - any other condition that may affect its safe operation.
- AFTER USE**, wipe external surfaces of the appliance with clean cloth. Do not use Steel Wool or scouring powder on any part of the Food Slicer.
- After every use, thoroughly wipe off all parts with a clean rag using warm soapy water and a mild chlorine bleach solution, and clean the Food Pusher, Blade, and Food Tray in a dishwasher. Failure to follow all cleaning instructions and warnings may result in serious illness due to food poisoning.
- !WARNING! If the supply cord of this appliance is damaged, it must be replaced only by a qualified service technician.**

Storage


- Set the thickness to 0".
- Remove the Food Pusher (36) and Food Tray (35).
- Fold up the Platform (31) against the Housing (23).
- Wrap up the Power Cord (6) and store it underneath.
- Store the entire unit in a sealed clean plastic bag.
- Store in a location out of reach of children.

Parts List and Diagram

Parts List

Part	Description	Qty	Part	Description	Qty	Part	Description	Qty
1	Motor	1	14	Push Button Frame	1	27	Thickness Knob	1
2	Fiberglass Tube Ø2×50mm	1	15	Push Button	1	28	Thickness Adjusting Gear	1
3	Fiberglass Tube Ø2×130mm	1	16	Cord Clamp	1	29	Screw T3×12	1
4	Down-Lead	1	17	Screw T3×12	2	30	Thickness Guide	1
5	Motor Bracket	1	18	Motor Cover	1	31	Platform	1
6	Power Cord	1	19	Spring Ø0.6 ×Ø6×20mm	1	32	Round Cushion	5
7	Capacitor 0.1K 275V~	1	20	Switch Lever	1	33	Screw T3×12	5
8	Bushing	1	21	Screw T3×10	4	34	Washer Ø3mm	5
9	Shrinkable Tube Ø1×12mm	2	22	Screw T3×10	4	35	Food Tray	1
10	Connector	2	23	Housing	1	36	Food Pusher	1
11	Shrinkable Tube Ø3×25mm	2	24	Square Cushion	2	37	Choke Coil (Double)	1
12	Switch	1	25	Thickness Guide Stopper	1			
13	Spring Ø0.6 ×Ø6×20mm	1	26	Blade	1			

Assembly Diagram

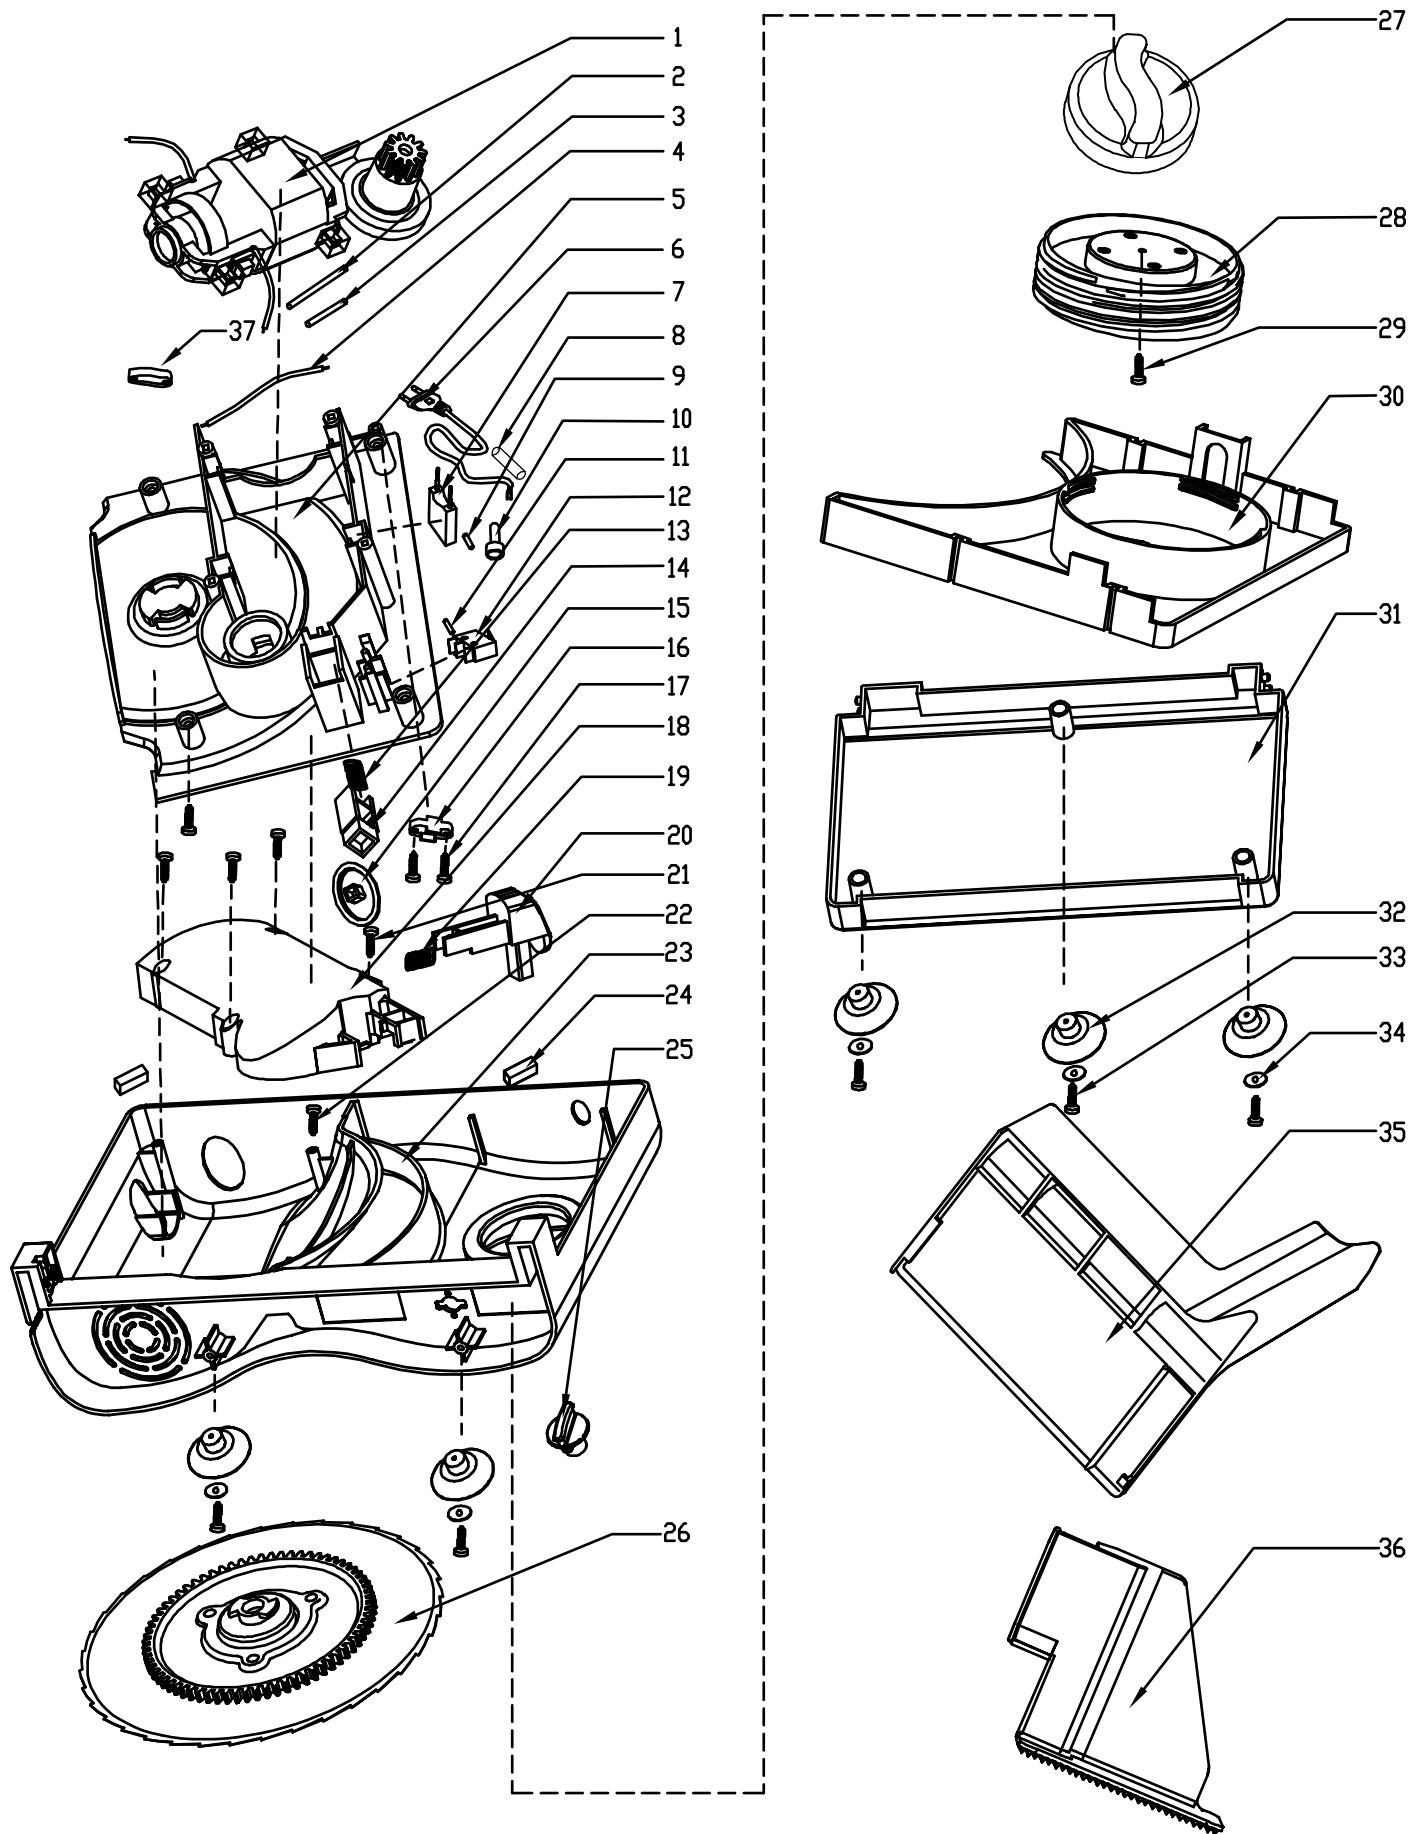

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



3491 Mission Oaks Blvd. • PO Box 6009 • Camarillo, CA 93011 • (800) 444-3353